


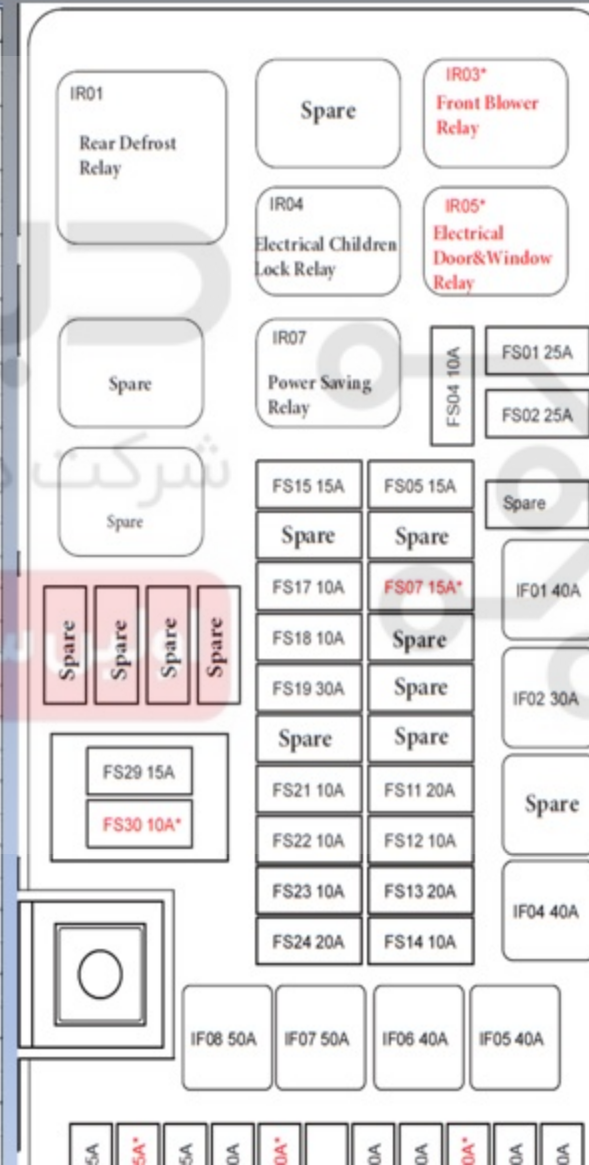

# • جعبه فیوز داخل اتاق:

No.	Name	Rated Current(A)
FS01	Left WEndow Fuse	25A
FS02	Right Window Fuse	25A
FS03	Ignition Fuse	15A
FS04	Rear View Mirror Heating Fuse	10A
FS05	Power Fuse	15A
FS07	Steering Column Lock Fuse	15A
FS11	Sunnoof Fuse	20A
FS12	A/C Fuse	10A
FS13	Door &Window Fuse	20A
FS14	Inner lamp Fuse	10A
FS15	Children Lack Fuse	15A
FS17	All windaw anti pinch Fuse	10A
FS18	Driving Record Fuse	10A
FS19	Driver Seat Adjusting Fuse	30A
FS21	Diagnosis Connector Fuse	10A
FS22	Cluster Fuse	10A
FS23	Washing Fuse	10A
FS24	Lamp Fuse	20A
FS29	Audio Fuse	15A
FS30	Online Box Fuse	10A
FS31	Airbag Fuse	10A
FS32	IG1 Puse	10A
FS33	Sunroof Fuse	10A
FS34	Cluster/BCM Fuse	10A
FS35	EIEthical Control Fuse	10A
FS36	Seat Heating Fuse	15A
FS37	Anti-Pinch OSVHuse	10A
FS38	Rear View Mirror Fuse	10A
FS39	Charging Port Fuse	15A
FS40	Rear Power Supplier Fuse	15A
FS41	Frant Power Supplier Fuse	15A
IF01	Electrical Window Fuse	40A
IF02	Sea Shipencat Fuse	30A
IF04	Rear Defrost Fuse	40A
IF05	acc Ponser Fuse	40A



Serial number	Name	Rated current (ampere)	instructions
IF01	Electric window fuse	40A	
IF02	Marine insurance fuse	30A	
IF03	Co-pilot power seat	10A	Some models do not have this insurance
IF04	Rear defrosting fuse	40A	
IF05	Driving the power seat	40A	Some models do not have this insurance
IF06	Front blower fuse	40A	
IF07	Normal current 2 fuse	50A	
IF08	Normal power 1 fuse	50A	

Serial number	Name	instructions
IR01	Rear defrosting relay	
IR03	Front blower relay	
IR04	Electric child lock relay	Some models do not have this insurance
IR05	Electric window relay	Some models do not have this insurance
IR06	/	
IR07	Power-saving relay	
IR08	/	