



جعبه فیوز داخل موتور:

Serial number	The name
ER01	Compressor relay
ER02	Welcome light relay
ER03	Starting relay
ER04	The main relay
ER05	Close light relay
ER06	Horn relay
ER07	Fan relay
ER08	Front wiper on/off relay
ER09	Front wiper high/low speed relay
ER10	The ACC relay
ER11	High beam relay
ER12	Start control relay
ER14	Fan speed relay
ER15	Fan high speed relay
ER16	IGN relay
ER17	Oil pump relay
ER18	Electronic vacuum pump relay

Serial number	The name of the	Rated current (ampere)
EF01	ECU fuse	10A
EF02	Main relay electric 2 fuse	15A
EF03	Main relay electric 3 fuse	10A
EF05	Main relay 1 fuse	15A
EF06	IGN	15A
EF07	Transmission fuse CVT	10A
EF09	ECU IGN2	10A
EF10	Oil pump fuse	15A
EF11	ECU IGN1	10A
EF12	Left light fuse	10A
EF13	Right close light fuse	10A
EF14	Compressor fuse	10A
EF15	High beam fuse	15A
EF16	Start feedback fuse	10A
EF17	Close light fuse	15A
EF18	Horn fuse	15A
EF19	Welcome light fuse	15A
MD01	Generator fuse	150A
MD02	Electric power steering fuse	80A
SF02	Front wiper fuse	30A
SF03	Electronic stability system 1 fuse	40A
SF04	Electronic stability system 2 fuse	40A
SF06	TCU-DCT	30A
SF07	Electric control system fuse	40A
SF08	ACM	30A
SF09	Electronic vacuum pump fuse	20A
SF10	Starting fuse	30A
SF11	Electric tail door fuse	30A
SF12	ACC	40A
EF20	Sound control	15A

