


electric window

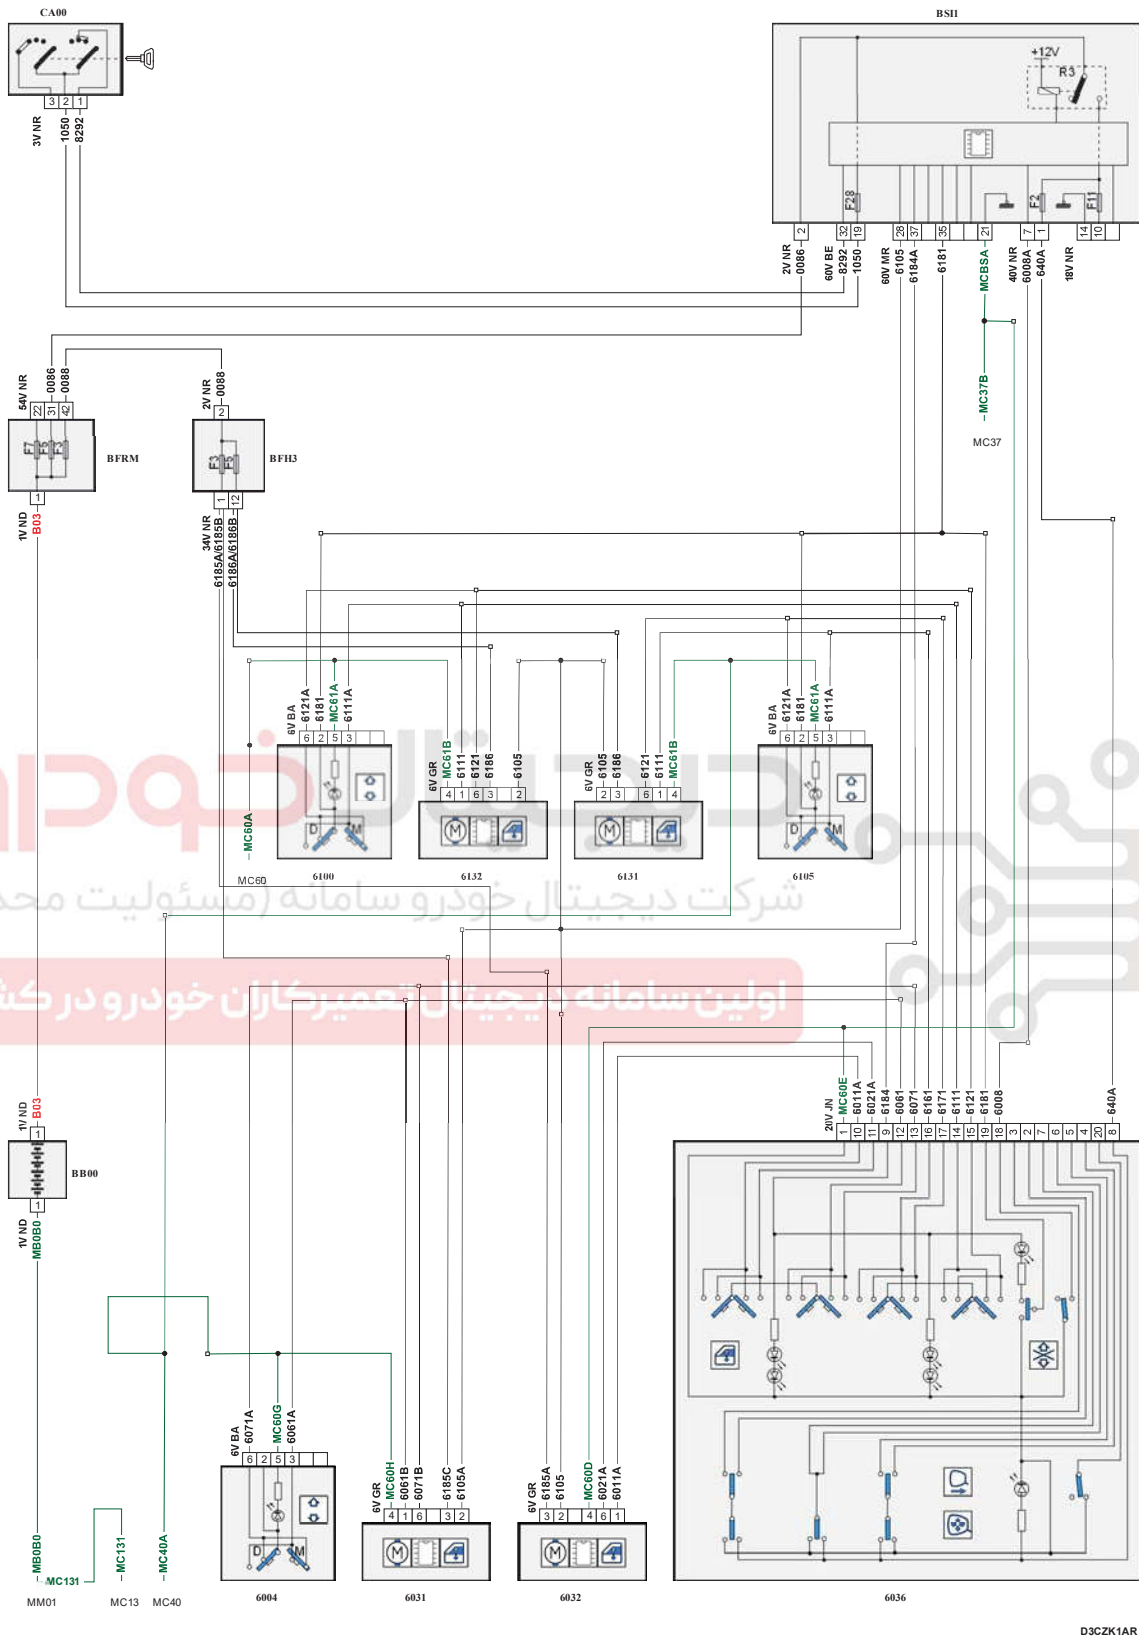

شرکت دیجیتالی خودرو سامانه (مسئولیت محدود)
 اولین سامانه دیجیتال تعمیرکاران خودرو در کشور

electric window

item code	description	information
6004	null	passenger 's electric window switch
6031	null	passenger 's front sequential electric window unit + motor
6032	null	driver 's front sequential electric window unit + motor
6036	null	driver's door electric windows and exterior mirrors control pad
6100	null	left rear electric window switch
6105	null	right rear electric window switch
6131	null	rear RH electric window unit + motor
6132	null	rear LH electric window unit + motor
BB00	null	ancillaries battery
BFH3	null	cabin relay fusebox 1
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
E602A	null	crimp one information (or equipotential 602) wire
E602B	null	crimp one information (or equipotential 602) wire
E610	null	crimp one information (or equipotential 610) wire
E618A	null	crimp one information (or equipotential 618A) wire
EM37C	null	crimp earth (earth point number 37C)
EM40	null	crimp earth (earth point number 40)
EM60	null	crimp earth (earth point number 60)
EM60A	null	crimp earth (earth point number 60A)
EM60B	null	crimp earth (earth point number 60B)
MC13	null	body earth point number 13
MC37B	null	body earth point number 37B
MC40A	null	body earth point number 40
MC60A	null	body earth point number 60
MM01	null	engine earth point number 01